



Learning the Keypad in using your Key fob;

- 1) **Key fob:** Press **HOME** and **PANIC**, (Siren will acknowledge)
- 2) **Keypad:** Press **DISARM** twice, **PANIC A** and **0000 (or PIN)**. (Green LED will flash)
- 3) **Keypad:** Press **PANIC A** and **1**, (Siren will acknowledge)
- 4) **Keypad:** Press **DISARM** twice.
- 5) **Keypad:** If unsure about the PIN number, remove the battery using a flat-headed screwdriver & press **3** whilst reinserting the batteries. Restart from step 2 again.

You may test the keypad by pressing **ARM** to arm, and then **DISARM** and **0000/PIN** to disarm.

Learning the Keypad in using your existing Keypad (6000 range);

- 1) **Old Keypad:** Press **DISARM** twice, **PANIC A** and your **PIN**. (Green LED flash continually)
- 2) **Old Keypad:** Press **PANIC A** and **4**. (Siren will acknowledge)
- 3) **New Keypad:** Press **DISARM** twice, **PANIC A** and **0000**. (Green LED flash continually)
- 4) **New Keypad:** Press **PANIC A** and **1**, (Siren will acknowledge)
- 5) **Both Keypads:** Press **DISARM** twice.
- 6) **New Keypad:** If the green LED light does not continually flash, remove the battery using a flat-headed screwdriver & press **3** whilst reinserting the batteries. Restart from step 3 again.

You may test the keypad by pressing **ARM** to arm, and then **DISARM** and **0000/PIN** to disarm

Learning the Keypad in using your Control Panel;

- 1) **CP:** Press **#** or **PR** and enter your **PIN** number, then **OK** [or tick]
- 2) **CP:** Scroll down to **DEVICES +/-** and press **OK** [or tick]
- 3) **CP:** Select **OK** [or tick] to **ADD DEVICE** (CP will ask to press a button)
- 4) **Keypad:** Press **DISARM** twice, **PANIC A** and your **0000**. (Green LED will flash)
- 5) **Keypad:** Press **PANIC A** and **1**, (Siren will acknowledge)
- 6) **Keypad:** Press **DISARM** twice.
- 7) **Keypad:** If the green LED light does not continually flash, remove the battery using a flat-headed screwdriver & press **3** whilst reinserting the batteries. Restart from step 4 again.
- 8) **CP:** Return to **ALARM OFF**

NOTE: When changing the PIN number on the Keypad, use the same PIN as the Control Panel.
You may test the keypad by pressing **ARM** to arm, and then **DISARM** and **0000/PIN** to disarm.

Learning the 6000 Series Keypad into a 3000 Series Siren bell box;

- 1) **Siren:** Remove the siren cover a remove a battery. (WARNING: The siren will sound!)
- 2) **Siren:** Reinsert the batteries and take off jumper 1.
- 3) **Keypad:** Press **DISARM** twice, **PIN** and **PANIC A**. (Green LED will flash)
- 4) **Keypad:** Press **PANIC A** and **1** (Siren will acknowledge)
- 5) **Keypad:** Press **DISARM** twice.
- 6) **Siren:** Replace jumper 1 into the on position and replace the siren cover.

NOTE: When changing the PIN number on the Keypad, use the same PIN as the Control Panel.
You may test the keypad by pressing **ARM** to arm, and then **DISARM** and **0000/PIN** to disarm.

Learning the Keypad in using your existing Keypad (3000 range);

- 1) **Old Keypad:** Press **PIN** number **TEST**. (Tx LED flash continually)
- 2) **Old Keypad:** Press **TEST** and **4**. (Siren will acknowledge)
- 3) **New Keypad:** Press **DISARM** twice, **PANIC A** and **0000**. (Green LED flash continually)
- 4) **New Keypad:** Press **PANIC A** and **1**, (Siren will acknowledge)
- 5) **Both Keypads:** Press **DISARM/OFF** twice.
- 6) **New Keypad:** If the green LED light does not continually flash, remove the battery using a flat-headed screwdriver & press **3** whilst reinserting the batteries. Restart from step 3 again.

You may test the keypad by pressing **ARM** to arm, and then **DISARM** and **0000/PIN** to disarm change the PIN number to match the one on the old keypad.

Learning the 6000 Series Keypad into a 3000 Series Siren bell box;

- 1) Siren: Remove the siren cover turn power OFF. (WARNING: The siren will sound!)
- 2) Siren: Turn ON Power – wait for siren to beep then Press Learn button once.
- 3) Keypad: Press DISARM twice, PIN and PANIC A. (Green LED will flash)
- 4) Keypad: Press PANIC A and 1 (Siren will acknowledge)
- 5) Keypad: Press DISARM twice.
- 6) Siren: Replace jumper 1 into the on position and replace the siren cover.

NOTE: When changing the PIN number on the Keypad, use the same PIN as the Control Panel. You may test the keypad by pressing ARM to arm, and then DISARM and 0000/PIN to disarm.